

NOTICE!

FOR MISSING PARTS:

1-800-775-1965 or 1-800-366-1599

**PLEASE DO NOT
RETURN THIS UNIT TO
THE RETAIL STORE**

OWNER'S MANUAL

**Model # ACD-1500 C/P Junior Dome
5 ft x 4 ft x 36 in**

(✓) QTY.	DESCRIPTION	PART NUMBER
	<u>FABRIC BODY:</u>	
— 1	Dome Tent	N/A
	<u>POLES (CHOOSE ONE):</u>	
— 1	Pole Set of Two Fiberglass, shock-corded poles – black (ACD-1500 C)	PSET-290BK
— 1	Pole Set of Two Fiberglass, shock-corded poles – pink (ACD-1500 P)	PSET-290PK
	<u>CARRY BAG (CHOOSE ONE):</u>	
— 1	Carry Bag – olive (ACD-1500 C)	CBAG-590OL
— 1	Carry Bag – pink (ACD-1500 P)	CBAG-590PK
	<u>UNIVERSAL PARTS:</u>	
— 1	Pole Bag	PBAG-21IN
— 1	Stake Bag	SBAG-8IN
	<u>STAKES:</u>	
— 1	Stake Set of Four 5 inch steel stakes	SSET-4ST5IN

Review your parts list above to make sure all parts listed above have been included in your package.

Please do NOT return product to store.

Call our TOLL FREE Numbers: 800 775-1965 or 800-366-1599 Monday -Friday 7am - 5pm CST

Mention your complete Model Number so that our Representative may assist you!

TROUBLESHOOTING GUIDE

 
PROBLEM	SOLUTION
1. CONDENSATION	THIS IS CAUSED BY LOWER TEMPERATURES ON OUTSIDE OF PRODUCT COMBINED WITH BODY HEAT ON INSIDE OF PRODUCT. WHEN THIS OCCURS, AVOID TOUCHING WALLS TO REDUCE CONTACT LEAKAGE. LEAVING DOORS AND WINDOWS OPEN WILL REDUCE CONDENSATION.
2. MILDEW	TO AVOID MILDEW, NEVER STORE YOUR PRODUCT WET OR DAMP. HOWEVER, IF MILDEW OCCURS, USE A SOFT BRISTLE BRUSH OR SPONGE WITH MILD SOAP TO CLEAN. LET DRY IN THE SUNLIGHT AND APPLY SEAM SEALER COMPOUND ON INSIDE SEAMS.
3. REPAIRING A TEAR	FOR SMALL TEARS USE A SELF-ADHESIVE PATCH KIT. WE RECOMMEND A REPAIR SHOP FOR LARGER TEARS.
4. FAULTY ZIPPER	ALL OF OUR TENTS COME WITH SELF-REPAIRING NYLON COIL ZIPPERS. IF THE ZIPPER SEPARATES, YOU CAN MOVE THE SLIDER TO THE BEGINNING OF THE ZIPPER TAPE AND REWORK THE ZIPPER. LOCAL AWNING AND UPHOLSTERY REPAIR SHOPS MAY BE ABLE TO ASSIST YOU.
5. FLOOR CONDENSATION <small>(ONLY APPLICABLE ON PRODUCTS WITH FLOOR)</small>	TO PREVENT FLOOR CONDENSATION USE A GROUND CLOTH. PLACING A GROUND CLOTH UNDER YOUR PRODUCT WILL PROLONG ITS LIFE. GROUND CLOTH SIZE SHOULD BE SLIGHTLY SMALLER THAN PRODUCT FLOOR SIZE.

⚠ WARNING

This Tent/Shelter has been developed and is intended to provide protection from sun and light rain. DO NOT use any gas or flame sources under or near this product. This product is NOT WATERPROOF. Excess water build-up can cause the frame system to become unstable, and collapse, causing injury. Any personal accessories or modifications to product should be removed before the onset of inclement weather such as heavy rain, wind, lightning, hail, snow, etc. This product should be completely dismantled to avoid permanent damage to product components and avoid any possibility of personal injury. This product is not a toy. This product is not designed for use by children without adult supervision. Under no circumstances should this product be used as a permanent or temporary storage facility for children's toys, garden tools, personal belongings or similar valuables. Consumer-made modifications for extended use, i.e. permanently securing to decks and patios and/or Consumer's failure to follow stated guidelines, will invalidate any NorthPole Limited warranty, expressed or implied.

PERHAPS WE'VE MISSED SOMETHING IN OUR TROUBLESHOOTING GUIDE. FEEL FREE TO GIVE US YOUR IDEAS ON "TRICKS OF CAMPING", REPAIR PROCEDURES, FEATURES YOU'D LIKE TO SEE, OR OTHER RECOMMENDATIONS. SEND THEM TO:

NORTHPOLE LIMITED
23 Town and Country Drive
Washington, MO 63090

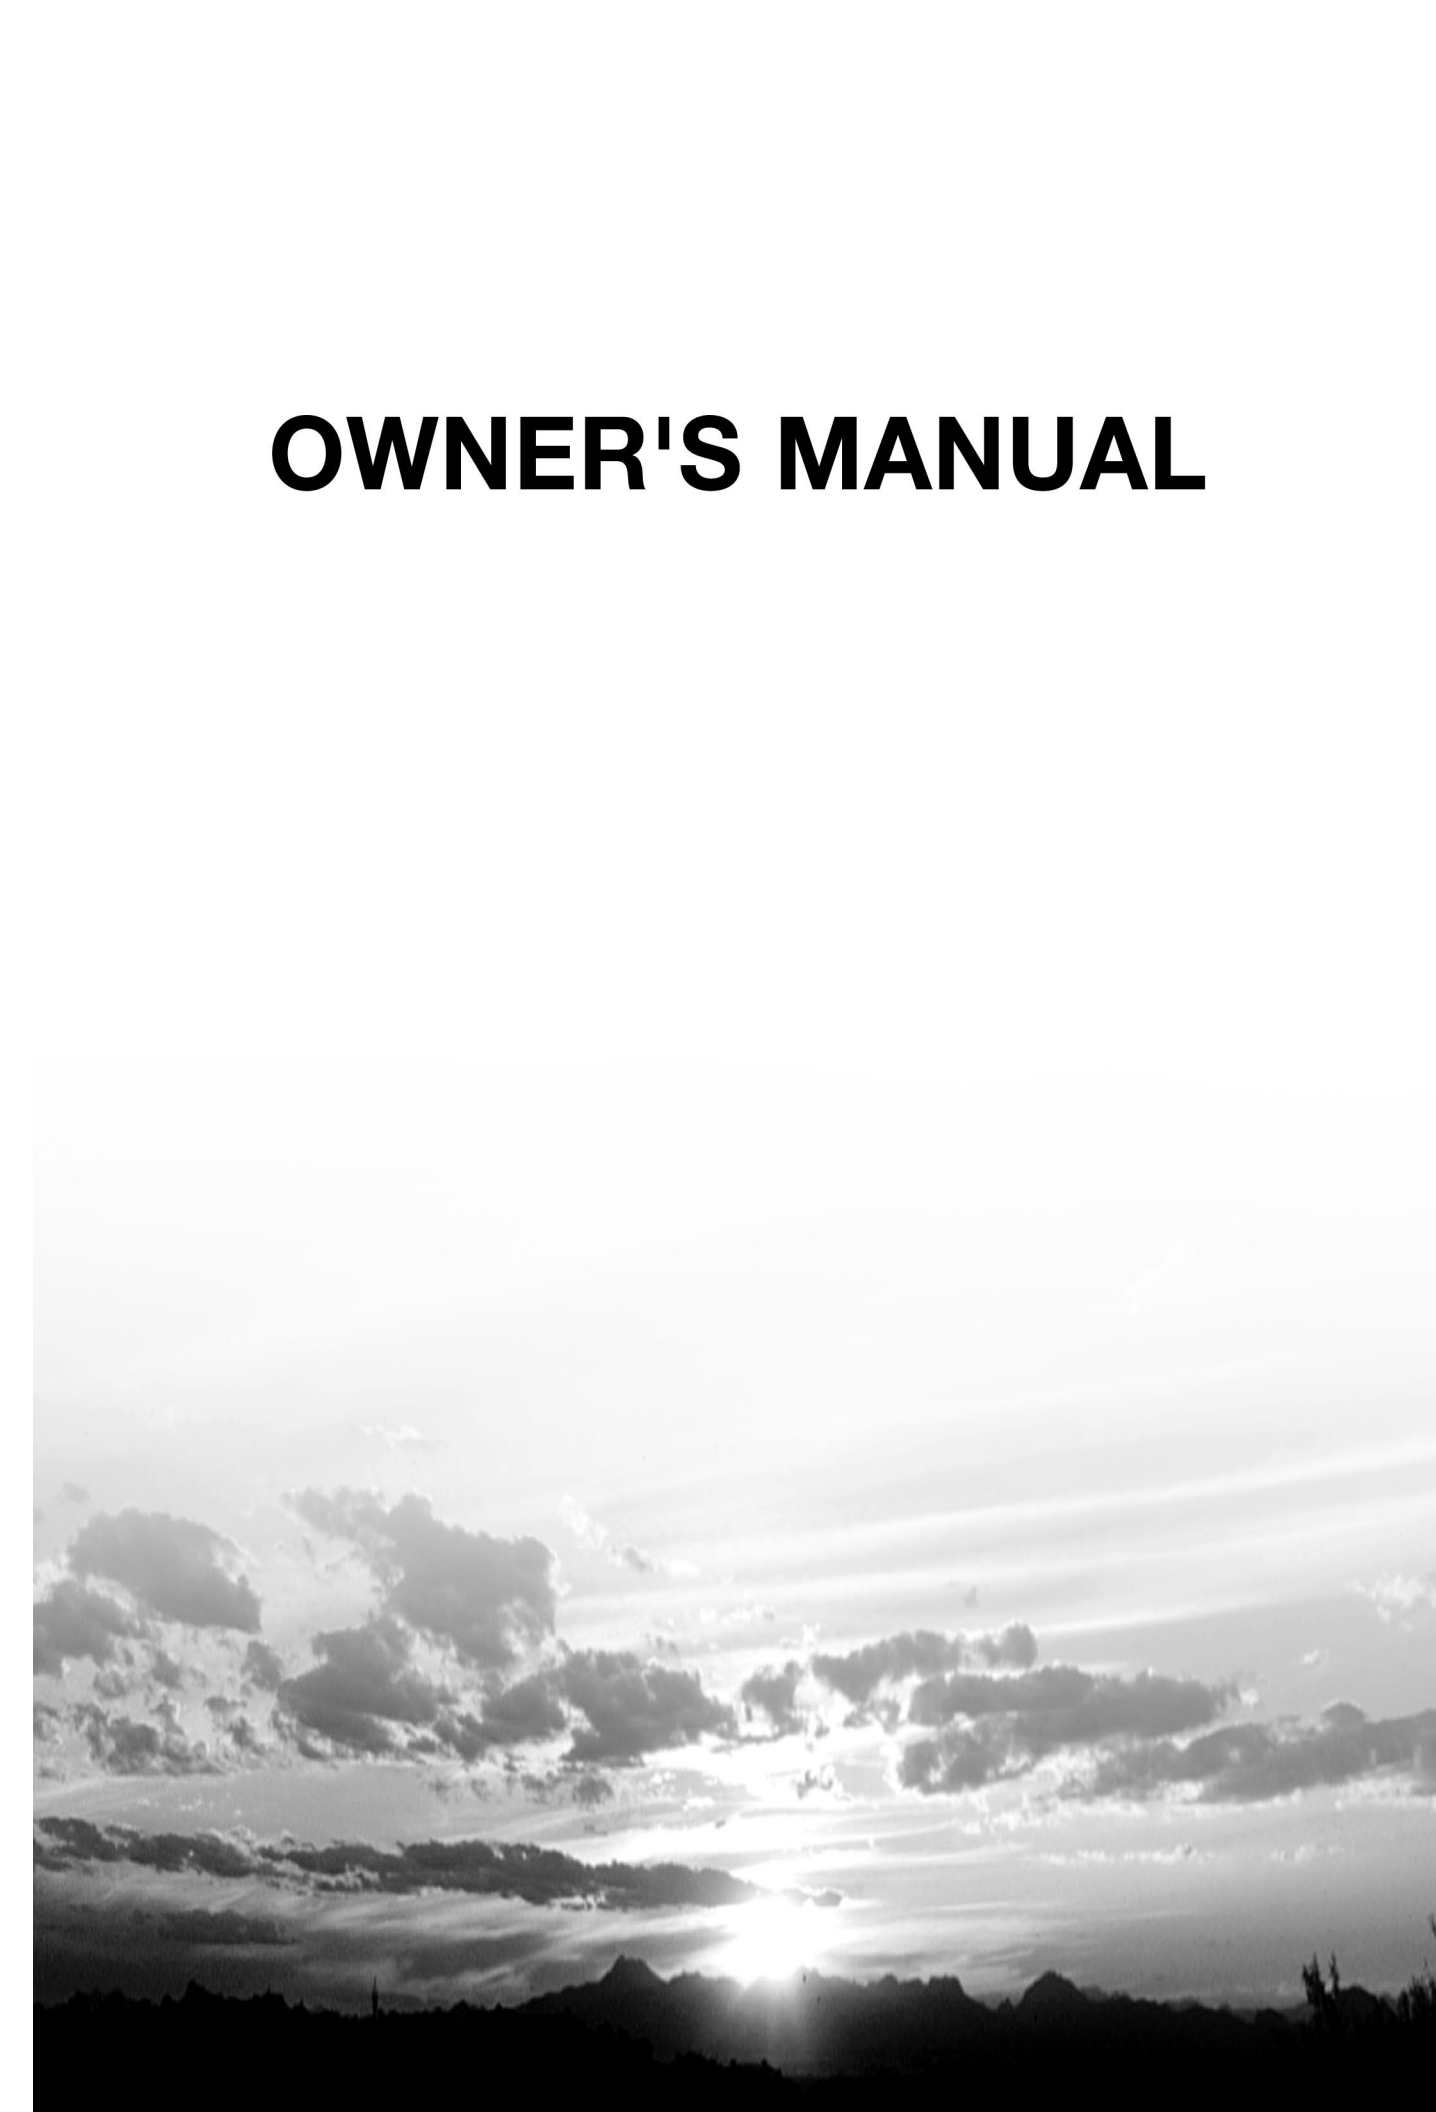

INTRODUCTION

A MESSAGE TO OUR CUSTOMERS:

Thank you for purchasing a quality product manufactured by NorthPole Limited. As the world leader in outdoor recreational products, we pride ourselves in delivering quality, customer friendly products. Please visit our authorized retailers for many quality products to suit your needs from NorthPole Limited. As a valued customer, your satisfaction is very important to us. We welcome your feedback and await your responses, suggestions, and recommendations. Email us via Consumer@northpoleusa.com or visit our website www.NorthPoleLtd.com.

WE ADVISE YOU TO ASSEMBLE THIS PRODUCT AT LEAST ONCE AT HOME BEFORE GOING ON A TRIP. Obtaining a familiarity with the assembly and disassembly processes will help ensure your satisfaction and ease concerns you may have should you find yourself setting up in the dark or adverse weather conditions.

GET THE MOST ENJOYMENT FROM YOUR PRODUCT BY READING THIS OWNER'S MANUAL THOROUGHLY; THEN FOLLOW OUR CAMPING SUGGESTIONS OUTLINED BELOW. NOTE THE SYMBOLS WE USE AND WHY:



CALLS YOUR ATTENTION TO ANY POSSIBLE HAZARDS IN THE USE AND HANDLING OF YOUR PRODUCT.



CALLS YOUR ATTENTION TO PROVEN SUGGESTIONS COLLECTED FROM OUR CAMPING EXPERTISE AND WILL ENHANCE YOUR EXPERIENCE!

IMPORTANT NOTICE: You may compromise the original FIRE RETARDENCY and WATER REPELLENCY protective coatings when you apply sprays or other chemical treatments to your tent.

This fabric has been factory-treated and is HIGHLY WATER-REPELLANT; however, it is NOT WATERPROOF. All tents can experience seam leakage during wet weather. If you desire additional moisture protection, use a seam sealing compound ONLY; be sure to follow the manufacturer's directions. We recommend sealing your tent during your initial setup and prior to each camping season. Seam Sealer Compounds can be purchased at your local camping products retailer. For more information, please refer to our website, www.NorthPoleLtd.com or contact our Service Representatives via email @ Consumer@northpoleusa.com.



FABRIC

THIS FABRIC IS NOT WATERPROOF!

Your product's fabric is a synthetic material that has been treated and is not only highly-resistant to the sun's Ultraviolet (UV) light but also highly water-repellant in light rain conditions. Insure a successful and enjoyable camping experience by heeding the following tips:


- Keep objects from touching the inside, as objects will "draw in" moisture at the point of contact.
- "Prep" your product where necessary with a recommended seam sealing compound – refer to the seam sealing information in DO NOT SPRAY ME section of this owner manual.


Important: Prolonged exposure to sunlight that causes UV damage and/or the use of non-recommended foreign substances on synthetic material may damage the fabric properties and IS NOT COVERED BY THE LIMITED WARRANTY.



STRUCTURE

OUR RECREATIONAL PRODUCTS ARE CONSTRUCTED USING CUSTOM SPECIFICATIONS. However, they are not engineered for extreme weather, climates or environments. Modification, abuse, and inclement or "surprise" weather conditions may make additional precautions necessary. Here are some tips should you find yourself preparing for adverse conditions:

 Make sure any guy lines/ropes on your structure are well-secured in the ground and lines/ropes are sufficiently "taught" between structure and stake; adjust where needed. Facing periods of heavy winds? Secure tent loops and guy lines/ropes with extra stakes if necessary.

 Check the corners of the roof fabric and make sure roofline is properly positioned on framing. Use ALL provided methods of securing your fabric to its framing: nylon fastener strips, ties, and guy lines/ropes where located. Storms or steady rains may collect in water pockets on the roofline. Water adds weight, and weight weakens the overall structure. Avoid possible collapse by maintaining a watchful eye and removing any water accumulation that may occur.



FIRE

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS PRODUCT FABRIC. THIS FABRIC IS NOT FIREPROOF! It is made with flame resistant fabric, which meets CPAI-84 specifications. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.

Do NOT ERECT NEAR an open flame. NEVER use any fuel burning, oxygen consuming devices, or any device that produces fumes – including, but not limited to: cooking stoves, lanterns, candles, hibachis, or heaters – in or around your product. Inhalation of fumes may result in carbon monoxide poisoning, injury and/or death.



CARE & STORAGE

Your product is NOT machine washable. Your product is NOT machine dryable.

One of the easiest ways to damage your product is storing it while wet. If you must close camp in the rain, follow these guidelines carefully:

- As Soon As Possible: Open your product and ensure that every area of fabric is clean and completely dry before rolling up for storage.
- If necessary, hang product outside or loosely drape over a ladder in your garage or spare room for a few days, turning it inside and out to prevent trapping pockets of water or debris.
- Use a soft brush to wipe away surface dirt.

To clean your product: Hand wash using a mild dishwashing soap and soft bristle brush, then allow the fabric to completely air dry.

Don't neglect the frame: Wipe down all parts – steel, plastic, and fiberglass - before putting away for next season's use. Salts from ocean air can and do affect damage if not dealt with as quickly as possible.

Storing a wet fabric for as little as 24 hours in warm weather is likely to cause fabric to mildew. Once mildew sets in, the stains are permanent. Stains cannot be removed without potential harm to the fabric's coatings; chemicals or cleaning agents used to remove dirt and stains may irreversibly harm the fabric.

Salts, mildew and other causes and subsequent effects are NOT covered under the limited warranty.




DO NOT SPRAY!

ASSEMBLY DIRECTIONS

THIS RECREATIONAL PRODUCT REQUIRES TWO PEOPLE TO ASSEMBLE.

 
- ✘ Unless otherwise specified, all instructions will be given assuming the assembler is facing the front opening of the tent.
- ✘ Carefully fold out your poles, using caution to prevent snapping the shock-cording. Make sure each pole segment is "seated" into the next section before flexing the pole during set-up.
- ✘ Do not drop tent bag or pole bag. Do not bounce tent bag on its end to remove tent, as these actions may damage the shock-cord and/or pole ends.


STEP 1: Verify Package Content


Verify package content by emptying contents of bag(s) and confirming all parts are included and undamaged.  Do this at home before you leave on your trip.

STEP 2: Set Up the Tent Poles

- Select a smooth level site and spread out your tent.
- Extend poles and place in position ready for installation. Take a tent pole and push it through a set of pole sleeves located at top of the tent. Repeat process for remaining tent pole. Poles will cross each other at the center.

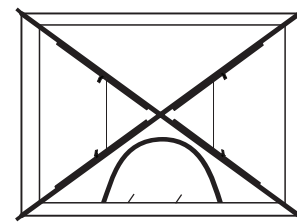

 - After sliding poles through sleeves, gently flex poles into an arch and insert ends into pole pockets at base of tent.  Caution: Make sure pole sleeve fabric is evenly distributed along pole and does not catch at pole joints. Undue stress could break pole or tear fabric.

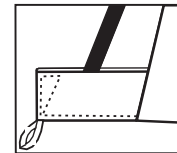


STEP 3: Stake the Tent

Secure tent by driving stakes through webbing loops at base of tent.




 Tent should appear as shown.

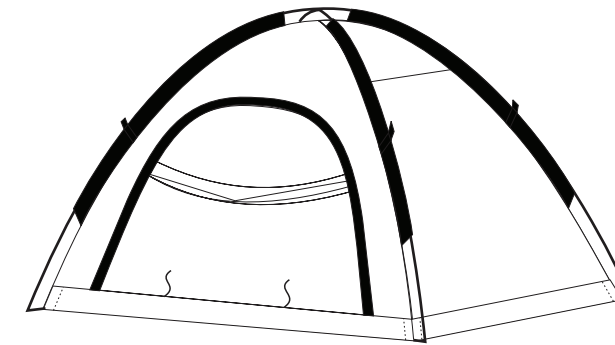


STEP 4: Attach the Rainfly

 Connect S-hook on rainfly to fabric loops on tent sleeves.

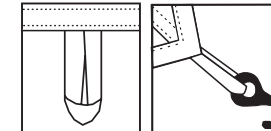


Tent should appear as shown.

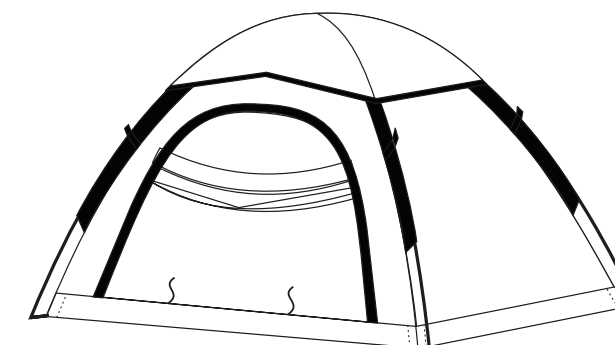 

DISASSEMBLY DIRECTIONS

- ✘ Make sure all the window(s) and door(s) are unzipped prior to disassembly.
- ✘ Store all Poles and Stakes in their corresponding Bags to prevent any possible tearing or damage to the fabric piece(s).


STEP 1: Remove the Stakes

Carefully remove stakes by pulling out the hook ends.  Do not pull or tug at the stake loops sewn onto the fabric body. Remove excess soil from the stakes and store them in their bag.

STEP 2: Remove Rainfly

Detach s-hooks that hold down rainfly.

STEP 3: Take Down the Tent

- Remove poles from pole pockets.
- Slide poles out by carefully pushing them through the sleeves away from the end at which you are standing.  By following these instructions, you will minimize risk of damaging poles and/or snapping shock-cording.
- Carefully fold poles and store them in their bag.

STEP 4: Fold the Tent

Fold tent into rectangular shape the width of pole bag. Lay pole bag at one end of tent and roll tightly together, slowly squeezing air out as you go. You can roll rainfly together with tent in this step. Store tent in carry bag provided. (Following these instructions will make it easier to fit tent into bag.)



NO MANUFACTURER'S WARRANTY

This product is not covered under any warranty. NorthPole Limited expressly excludes all warranties, including, but not limited to, any implied warranties of merchantability and fitness for a particular purpose. Some states do not allow the exclusion or limitation of implied warranties, so the above exclusion may not apply to you. Under no circumstances shall NorthPole Limited be liable for any incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

REPLACEMENT PARTS: When ordering replacement parts, always include Model Number, Part Number, and Part Description.
Call toll free 1(800) 775-1965 . Mon-Fri, 7:00 a.m. to 5:00 p.m. (Central Standard Time)

